

# REACT V BMP

## Instructions for Use

REACT V BMPa (circular), REACT V BMPb (rectangular)

20240916  
Art. 1546132

## Symbol key

### Symbols on the machine

This product complies with applicable EU directives



### Symbols in this user manual

Warning/Caution!



Risk of crushing



## Application area

The product is a variable flow damper or constant flow damper designed for comfort ventilation indoors. The product is used to regulate the supply air or extract air flow in ventilation ducts.

The product may not be used for anything other than its intended use.

## General



Read through the entire instructions for use before you install/use the product and save the instructions for future reference. It is not permissible to make changes or modify this product other than those specified in this document.

## The packaging contains the following items

1 x REACT V BMP

1 x Instructions for use

## Protective equipment



Always use appropriate personal protective equipment for the work in question, in the form of gloves, respirators and protective glasses during handling, installation, cleaning and service/maintenance.

## Electrical safety



Permitted voltage, see "Electrical data". It is not permissible to insert foreign objects into the product's contactor connections or the electronics's ventilation openings; risk for short circuiting.

24 V isolation transformer to be connected should comply with the provisions of IEC 61558-1.

Cable sizing must be carried out for cabling between the product and the power supply source.

Disconnect the power supply when working on products that are not required to run in production.

Always follow the local/national rules for who shall be permitted to carry out this type of electrical installation.

## Other risks



When the product is voltage fed, the damper will either open or close. This can entail a certain risk of pinch injuries to the fingers, for example, if these are placed between the damper blade and ventilation duct when the damper blade is rotating. The product's actuator is equipped with a release button that permits manual control of the damper blade, always ensure this is activated before working on the internal parts of the damper.



## Handling

- Always use appropriate transport and lifting devices when the product is to be handled to reduce ergonomic loads.
- The product must be handled with care.
- It is not permissible to carry the product by the measuring tube.

## Installation

- Moist, cold and aggressive environments must be avoided.
- Avoid installing the product near a heat source.
- Assemble the product according to applicable industry regulations.
- Install the product so that it is not accessible by unauthorized persons, for example above a suspended ceiling.
- Install the product for easy access during service/maintenance.
- Supplement the duct system with a cleaning hatch in the vicinity of the product to facilitate cleaning.
- If the product is mounted above a fixed ceiling, the inspection hatch must be located so that the product is accessible for inspection.
- If the product is mounted so that it is possible to gain access to the inside of the product, it must be supplemented with appropriate protection, for example, a ventilation unit.
- If the product is mounted in cold areas, the whole product must be insulated on the outside against condensation.
- For installation, the accessory FSR is recommended.
- The product can be installed position independent.
- It is recommended that the product be installed so that the front is visible.
- The product must be laid down prior to installation so that it cannot fall over.
- Check to make sure that the product does not have any visible defects.
- Make sure that the product is properly secured after it has been installed.
- Use the product's eyes to secure the cables with cable ties.
- Make sure all cables are properly secured after installation.
- Check that the actuator/controller is properly mounted.



The document was originally written in Swedish

**Swegon**

# Installation, torque, dimensions and weights

## Circular design

### Dimensions

| Size Ød<br>(mm) | A<br>(mm) | B<br>(mm) | C<br>(mm) | E<br>(mm) | Torque<br>(Nm) | Weight<br>(kg) | Flow range |      |                          |       | Tolerance Q* ±5%<br>with at least ±x |      |
|-----------------|-----------|-----------|-----------|-----------|----------------|----------------|------------|------|--------------------------|-------|--------------------------------------|------|
|                 |           |           |           |           |                |                | Min.       |      | Max = Vnom <sup>*)</sup> |       |                                      |      |
|                 |           |           |           |           |                |                | l/s        | m³/h | l/s                      | m³/h  | l/s                                  | m³/h |
| 100             | 475       | 485       | 190       | 50        | 5              | 1.6            | 5          | 18   | 58                       | 209   | 2                                    | 7    |
| 125             | 475       | 485       | 215       | 50        | 5              | 1.8            | 9          | 32   | 97                       | 349   | 2                                    | 7    |
| 160             | 475       | 485       | 255       | 50        | 5              | 2.1            | 16         | 58   | 170                      | 612   | 2                                    | 7    |
| 200             | 475       | 485       | 300       | 50        | 5              | 2.7            | 25         | 90   | 272                      | 979   | 3                                    | 11   |
| 250             | 525       | 535       | 350       | 50        | 5              | 3.4            | 40         | 144  | 438                      | 1577  | 5                                    | 18   |
| 315             | 560       | 570       | 415       | 50        | 10             | 4.8            | 63         | 227  | 710                      | 2556  | 8                                    | 29   |
| 400             | 695       | 705       | 505       | 60        | 10             | 6.8            | 102        | 367  | 1155                     | 4158  | 13                                   | 47   |
| 500             | 820       | 840       | 605       | 60        | 10             | 9.4            | 164        | 590  | 1850                     | 6660  | 20                                   | 72   |
| 630             | 915       | 935       | 735       | 60        | 20             | 14.4           | 300        | 1080 | 2920                     | 10512 | 32                                   | 115  |

\*)Vnom at 120 Pa in pressure reading.

\*Installed according to the instructions.

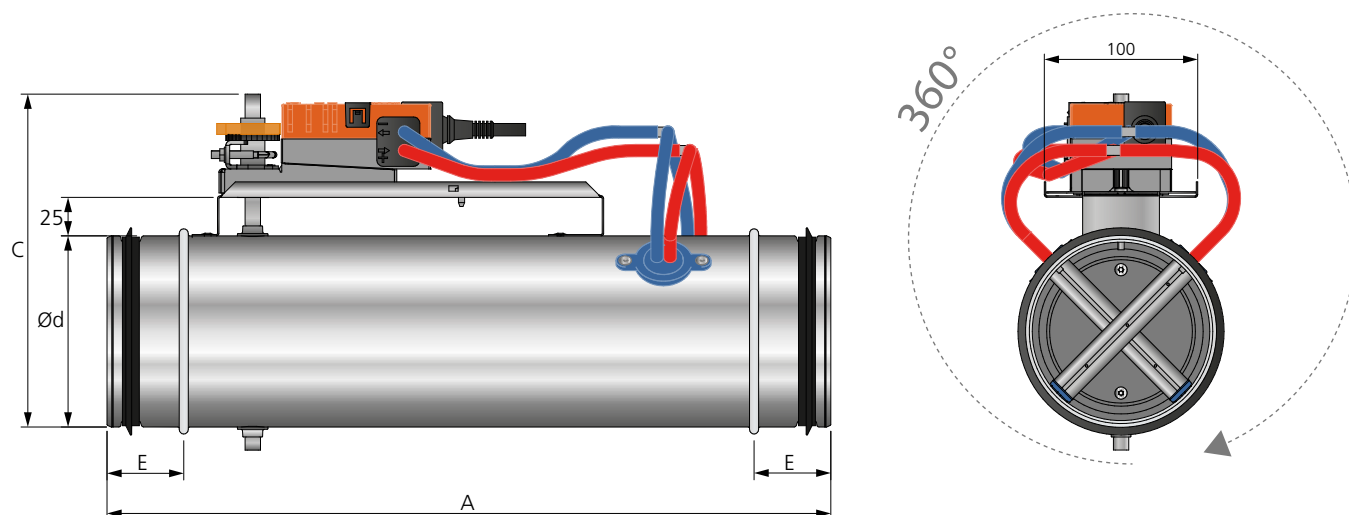


Figure 1. Dimensions (mm), REACT V BMP circular. The damper can be installed at an optional angle.

## Installation

- The product's air flow measurement requires a straight duct section as per the installation figures.
- In unfavourable conditions before or with disruption, the product's tolerances cannot be guaranteed.
- Installation is position independent.
- The product can be installed horizontally or vertically.
- Instructions for Use are supplied with the product on delivery, but can also be downloaded from [www.swegon.com](http://www.swegon.com).

### Straight duct section requirements

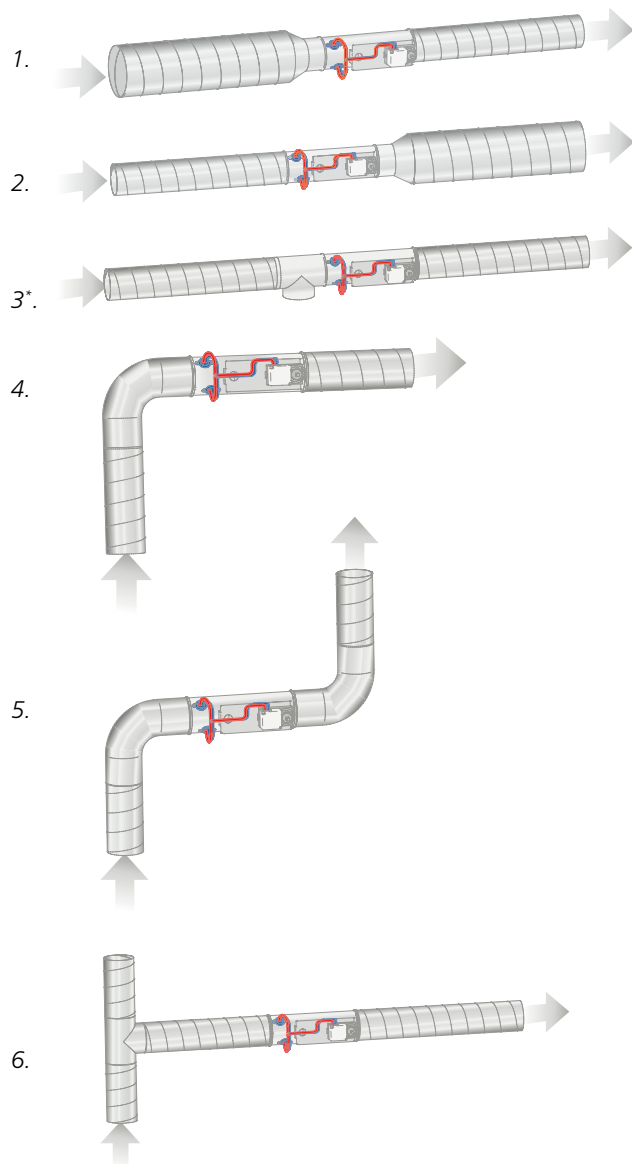


Figure 2. Straight duct section requirements in circular ducts, number of  $\varnothing$  before product:  
Image 1-5 require no straight duct section (image 3\* illustrates a T piece with a cleaning hatch).  
Image 6 requires a straight duct section before the damper equivalent to 4 x the diameter of the duct.

### Straight duct section requirements in case of sound attenuator with baffle

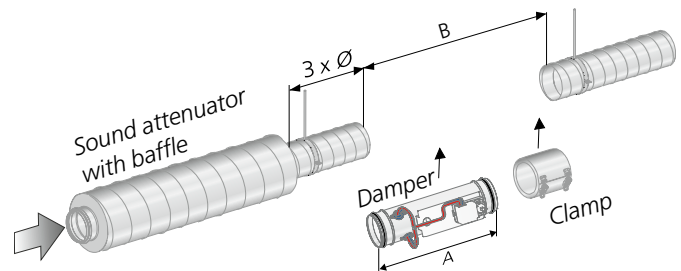


Figure 3. Straight duct section requirements 3 x  $\varnothing$  in case of sound attenuator with baffle or centre body.

### Installation in the duct system

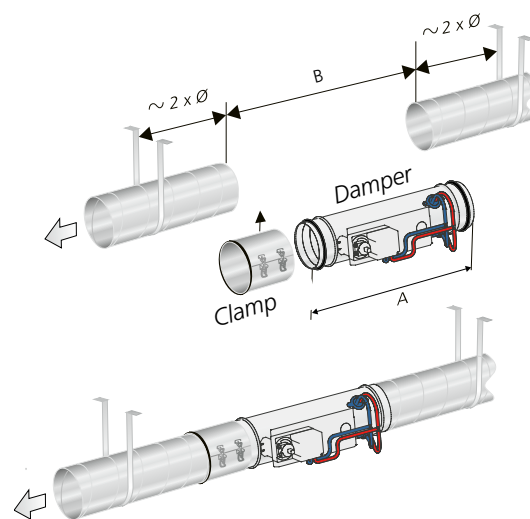


Figure 4. Installation in the duct system. The ducts must be firmly fixed to the frame of the building on each side of the product.

# Rectangular design

## Dimensions

| Size BxH<br>(mm) | Torque<br>(Nm) | Weight<br>(kg) | Flow range |      |                          |       | Tolerance Q* ±5%<br>with at least ±x |      |
|------------------|----------------|----------------|------------|------|--------------------------|-------|--------------------------------------|------|
|                  |                |                | Min.       |      | Max = Vnom <sup>*)</sup> |       |                                      |      |
|                  |                |                | l/s        | m³/h | l/s                      | m³/h  | l/s                                  | m³/h |
| 200 x 200        | 5              | 6.0            | 67         | 241  | 365                      | 1314  | 8                                    | 29   |
| 300 x 200        | 5              | 7.2            | 100        | 360  | 548                      | 1973  | 12                                   | 43   |
| 400 x 200        | 5              | 8.3            | 133        | 479  | 730                      | 2628  | 17                                   | 61   |
| 500 x 200        | 5              | 9.5            | 167        | 601  | 913                      | 3287  | 21                                   | 76   |
| 600 x 200        | 5              | 10.5           | 200        | 720  | 1095                     | 3942  | 25                                   | 90   |
| 700 x 200        | 5              | 11.7           | 233        | 839  | 1278                     | 4601  | 29                                   | 104  |
| 800 x 200        | 5              | 12.9           | 267        | 961  | 1460                     | 5256  | 33                                   | 119  |
| 1000 x 200       | 10             | 15.2           | 333        | 1199 | 1825                     | 6570  | 42                                   | 151  |
| 300 x 300        | 5              | 8.8            | 152        | 547  | 834                      | 3002  | 19                                   | 68   |
| 400 x 300        | 5              | 10.0           | 203        | 731  | 1112                     | 4003  | 25                                   | 90   |
| 500 x 300        | 5              | 11.3           | 254        | 914  | 1390                     | 5004  | 32                                   | 115  |
| 600 x 300        | 5              | 12.6           | 305        | 1098 | 1668                     | 6005  | 38                                   | 137  |
| 700 x 300        | 5              | 13.7           | 355        | 1278 | 1946                     | 7006  | 44                                   | 158  |
| 800 x 300        | 5              | 15.1           | 406        | 1462 | 2224                     | 8006  | 51                                   | 184  |
| 1000 x 300       | 10             | 17.7           | 508        | 1829 | 2780                     | 10008 | 63                                   | 227  |
| 400 x 400        | 5              | 12.0           | 273        | 983  | 1495                     | 5382  | 34                                   | 122  |
| 500 x 400        | 5              | 13.4           | 341        | 1228 | 1869                     | 6728  | 43                                   | 155  |
| 600 x 400        | 5              | 14.7           | 409        | 1472 | 2243                     | 8075  | 51                                   | 184  |
| 700 x 400        | 5              | 16.3           | 478        | 1721 | 2616                     | 9418  | 60                                   | 216  |
| 800 x 400        | 10             | 17.8           | 546        | 1966 | 2990                     | 10764 | 68                                   | 245  |
| 1000 x 400       | 10             | 20.5           | 682        | 2455 | 3738                     | 13457 | 85                                   | 306  |
| 1200 x 400       | 10             | 23.4           | 819        | 2948 | 4485                     | 16146 | 102                                  | 367  |
| 1400 x 400       | 10             | 26.2           | 955        | 3438 | 5233                     | 18839 | 119                                  | 428  |
| 1600 x 400       | 10             | 29.0           | 1092       | 3931 | 5980                     | 21528 | 136                                  | 490  |
| 500 x 500        | 5              | 15.2           | 429        | 1544 | 2347                     | 8449  | 54                                   | 194  |
| 600 x 500        | 5              | 16.7           | 514        | 1850 | 2816                     | 10138 | 64                                   | 230  |
| 700 x 500        | 10             | 18.4           | 600        | 2160 | 3286                     | 11830 | 75                                   | 270  |
| 800 x 500        | 10             | 19.9           | 686        | 2470 | 3755                     | 13518 | 86                                   | 310  |
| 1000 x 500       | 10             | 23.0           | 857        | 3085 | 4694                     | 16898 | 107                                  | 385  |
| 1200 x 500       | 10             | 26.1           | 1028       | 3701 | 5633                     | 20279 | 129                                  | 464  |
| 1400 x 500       | 10             | 29.3           | 1200       | 4320 | 6572                     | 23659 | 150                                  | 540  |
| 1600 x 500       | 10             | 32.4           | 1371       | 4936 | 7510                     | 27036 | 171                                  | 616  |
| 600 x 600        | 10             | 19.0           | 618        | 2225 | 3388                     | 12197 | 77                                   | 277  |
| 700 x 600        | 10             | 20.8           | 722        | 2599 | 3952                     | 14227 | 90                                   | 324  |
| 800 x 600        | 10             | 22.4           | 825        | 2970 | 4517                     | 16261 | 103                                  | 371  |
| 1000 x 600       | 10             | 25.9           | 1031       | 3712 | 5646                     | 20326 | 129                                  | 464  |
| 1200 x 600       | 10             | 29.3           | 1237       | 4453 | 6775                     | 24390 | 155                                  | 558  |
| 1400 x 600       | 10             | 33.2           | 1443       | 5195 | 7904                     | 28454 | 180                                  | 648  |
| 1600 x 600       | 10             | 36.1           | 1649       | 5936 | 9033                     | 32519 | 206                                  | 742  |
| 700 x 700        | 10             | 22.1           | 844        | 3038 | 4622                     | 16639 | 105                                  | 378  |
| 800 x 700        | 10             | 24.7           | 964        | 3470 | 5282                     | 19015 | 121                                  | 436  |
| 1000 x 700       | 10             | 28.4           | 1205       | 4338 | 6602                     | 23767 | 151                                  | 544  |
| 1200 x 700       | 10             | 32.0           | 1446       | 5206 | 7923                     | 28523 | 181                                  | 652  |
| 1400 x 700       | 10             | 35.8           | 1688       | 6077 | 9243                     | 33275 | 211                                  | 760  |

<sup>\*)</sup>Vnom at 120 Pa in pressure reading.

\*Installed according to the instructions.

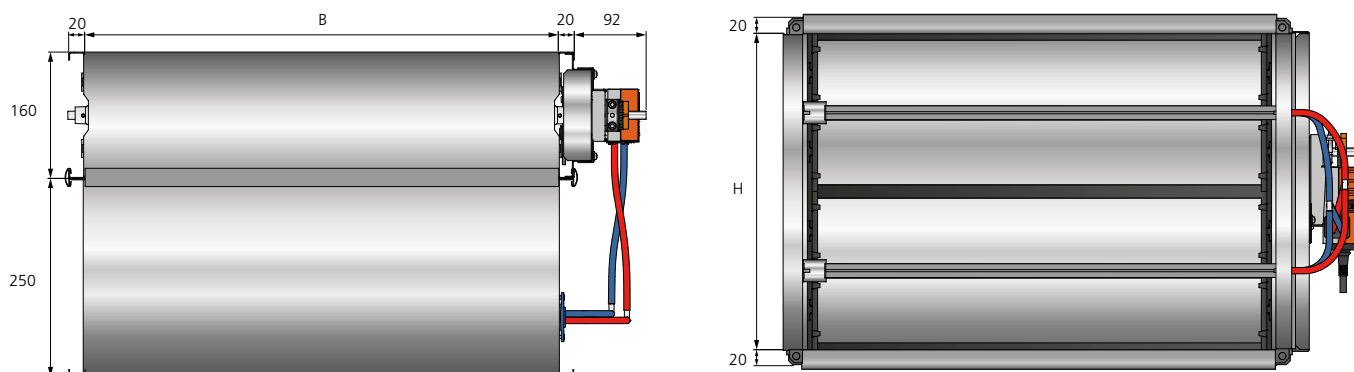


Figure 5. Dimensions (mm), REACT V BMP rectangular.

## Installation

- The product's air flow measurement requires a straight duct section as per the installation figures.
- In unfavourable conditions before or with disruption, the product's tolerances cannot be guaranteed.
- Damper spindles must be installed horizontally.
- For rectangular ducts, the damper is always installed so that the controller/actuator is placed along the side of the duct.
- Instructions for Use are supplied with the product on delivery, but can also be downloaded from [www.swegon.com](http://www.swegon.com).

## Straight duct section requirements

| Type of disruption | E ( $m_2=5\%$ )  | E ( $m_2=10\%$ ) |
|--------------------|------------------|------------------|
| One 90° bend       | $E = 3 \times B$ | $E = 2 \times B$ |
| T piece            | $E = 3 \times B$ | $E = 2 \times B$ |

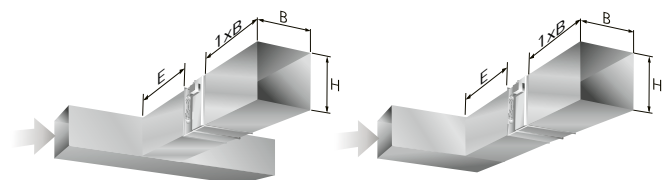


Figure 6. Straight duct section requirements in rectangular ducts.

$E$  = Straight duct section

$B$  = Width of duct

$H$  = Height of duct

## Straight duct section requirements in case of sound attenuator with baffle

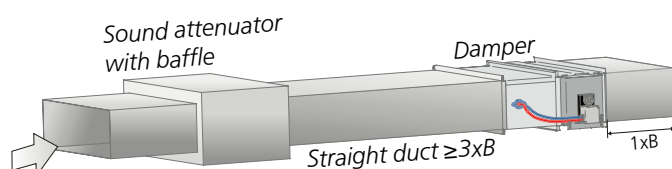


Figure 7. Straight duct section requirements  $3 \times B$  in case of sound attenuator with baffle. Applies to both supply and extract air.

# Connections

1-2 – Supply voltage 24 V AC/DC  
1-3 – Control signal (Y) 0..10/(2..10) V DC  
1-5 – Actual value signal (U) 0..10/(2..10) V DC  
For further calculations of Y and U see the formulas on page 10.  
Load on output 5: max 0.5 mA.

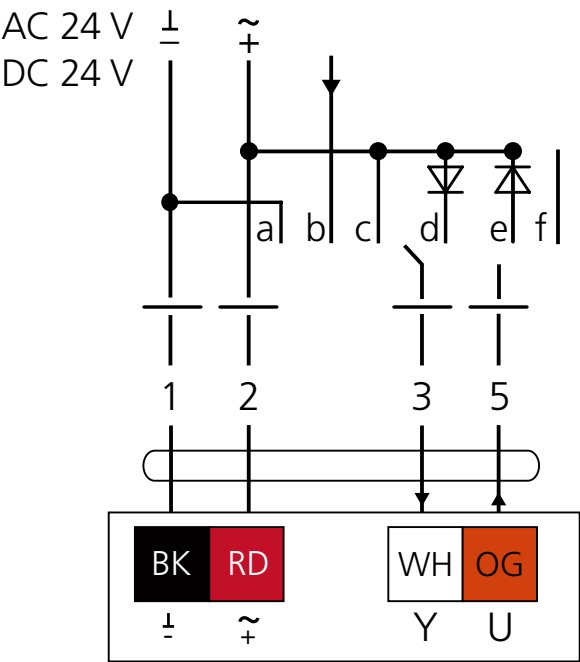


Figure 8. Wiring diagram.

## Regulation and forced control via analogue control signal

See connection in the wiring diagram, Figure 8.

|               | a      | b                 | c    | d                 | e                   | f    |
|---------------|--------|-------------------|------|-------------------|---------------------|------|
| Signal        |        |                   |      |                   |                     |      |
| Mode 2...10 V | Closed | Vmin <sup>1</sup> | Vmax | Open <sup>2</sup> | Closed <sup>3</sup> | Vmin |
| Mode 0...10 V | Vmin   | Vmin <sup>1</sup> | Vmax | Open <sup>2</sup> | Closed <sup>3</sup> | Vmin |

<sup>1</sup> Control signal 0-10 V DC / 2-10 V DC  
<sup>2</sup> Positive half-wave, only AC  
<sup>3</sup> Negative half-wave, only AC

Mode 2-10 V: Closed damper < 0.1 V

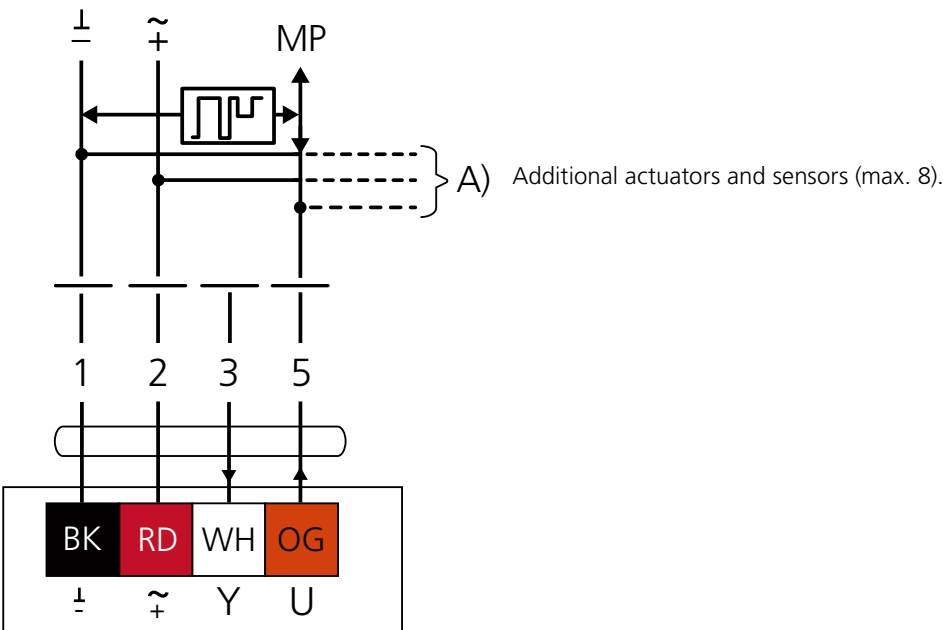


Figure 9. Wiring diagram MP-Bus.

# Handling

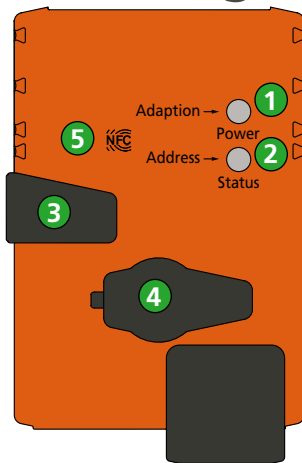


Figure 10. Belimo actuator.

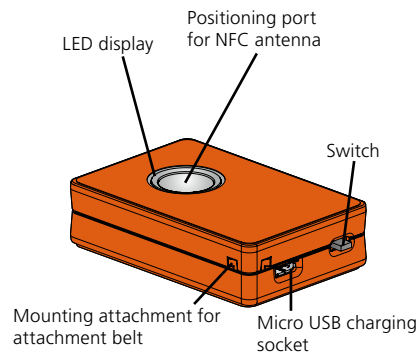


Figure 11. ZIP-BT-NHC.

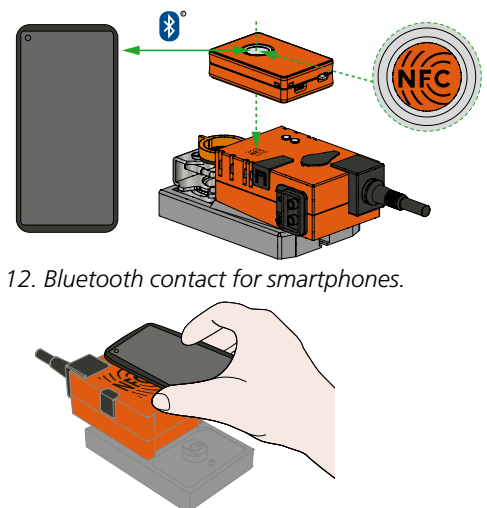


Figure 12. Bluetooth contact for smartphones.

Figure 13. NFC contact for smartphones.

## 1 Pushbutton and LED lighting green

|               |                                     |
|---------------|-------------------------------------|
| Off:          | No power or fault                   |
| On:           | In operation                        |
| Button press: | Activates rotation angle adaptation |

## 2 Pushbutton and LED lighting yellow

|               |   |
|---------------|---|
| Off:          | Normal operation                                |
| On:           | Adaptation or synchronisation process is active |
| Flickering:   | MP communication activated                      |
| Flashing:     | Addressing request sent to MP client            |
| Button press: | Confirmation of addressing                      |

## 3 Release button

|                  |   |
|------------------|---|
| Pressed button:  | The actuator is disengaged, the motor stops, manual overriding possible |
| Released button: | Synchronisation starts, followed by standard mode                       |

## 4 Service port

For connection of the hand-held terminal ZTH EU and PC-Tool

## 5 NFC logotype

For connection to Belimo Assistant App

| Function                                   | LED colour  | Light pattern           | Meaning                                     |
|--|-------------|-------------------------|---|
| ZIP-BT-NHC started up                      | Green       | Flashes once            | Battery OK (>30%)                           |
|  | Green > red | Flashes once            | Battery low, charging required              |
| ZIP-BT-NHC is in operation                 | Green       | Flashes every 5 seconds | Standby mode                                |
|  | Blue        | Flashes once            | Bluetooth® connection established (pairing) |
|  | White       | Fixed                   | Searching for NFC tag                       |
|  | White       | Flashing                | NFC connection active                       |
| Charging battery (ZIP-BT-NHC switched off) | Green       | Flashing                | Battery being charged                       |
|  | Green       | Fixed                   | Battery charged                             |

### NFC, Smartphone – Belimo Assistant App

Settings and diagnostics for the actuator can be carried out contactless via NFC. This requires an Android or iOS smartphone, the ZIP-BT-NFC dangle for Bluetooth contact with smartphones without NFC, as well as Belimo Assistant App.

To find the reception range with ZIP-BT-NFC the NFC logotype needs to be visible through the positioning port, see figure 12. When using a smartphone with NFC contact the smartphone needs to be centered above the NFC logotype on the actuator, see figure 13.

ZIP-BT-NFC must be secured to the unit with the attachment belt to avoid injuries to users and damage to property.

### ZTH EU / PC-Tool

Settings and diagnostics for the actuator can be carried out using Belimo PC-Tool or the hand-held terminal ZTH EU. When using the PC-Tool software, ZTH EU (USB) acts as an interface converter.

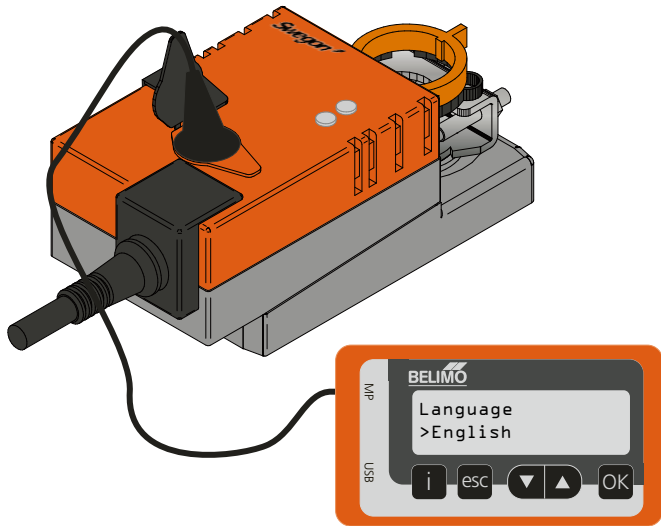


Figure 14. ZTH EU – Hand-held terminal for setting and reading the actuator's parameters.

- Browses up or down, and changes values/status
- Confirms selected value/goes to selected sub menu
- Cancels change/leaves the sub menu
- Shows additional information, if available

## Settings for hand-held terminal ZTH EU

To access the settings, press and hold OK and power up the hand-held terminal. Exit with esc.

| Display text                    | Description                     |
|---------------------------------|---------------------------------|
| Language<br>>English            | Change of language              |
| English<br>Deutsch              |                                 |
| Flow (Air)<br>>l/s              | Change of unit                  |
| l/s<br>m <sup>3</sup> /h<br>cfm |                                 |
| Expert mode<br>>Yes             | Activation of expert mode       |
| Yes<br>No                       |                                 |
| Advanced mode<br>>Yes           | Activation of advanced mode     |
| Yes<br>No                       |                                 |
| Backlight<br>>Timeout 30sec     | Duration of background lighting |
| Always on<br>1...255sec         |                                 |
| Empty cache<br>>No              | Clearing of the memory          |
| No<br>Yes                       |                                 |

## Settings for actuator

| Display text   | Description   |
|--|---|
| LMV-D3-MP SWN  | Identification of actuator  |
| Serial number<br>Type<br>Firmware<br>Designation<br>Position | Serial number<br>Actuator type<br>Software version<br>Designation<br>Position   |
| Volume x l/s<br>Setpoint x l/s                               | Shows the actual value<br>Shows the set point value   |
| Volume x l/s<br>Δp: x Pa                                     | Shows the actual value<br>Shows Δp  |
| Volume x l/s<br>Position x %                                 | Shows the actual value<br>Shows damper position   |
| Volume x l/s<br>Step >Auto                                   | Shows the actual value<br>Forced control  |
| Auto<br>Stop<br>V'max<br>V'mid<br>V'min<br>Close<br>Open     | Normal operation<br>Actuator stops in the current position<br>Damper regulates to selected max. value<br>Damper regulates to selected intermediate position<br>Damper regulates to selected min. value<br>Closes the damper fully<br>Opens the damper fully |
| Mode<br>>0-10V   | Available in expert mode  |
| 0-10V<br>2-10V   |   |
| Rotation direct.<br>>ccw                                     | Direction of rotation. Available in advanced mode.  |
| ccw<br>cw  | Anti-clockwise ( <b>standard, may not be changed</b> )<br>Clockwise   |
| Set to original values?<br>>No                               | Factory reset<br>Available in expert and advanced mode  |
| No<br>Yes  |   |
| V'min<br>x l/s   | Adjusts to desired min. value<br>Min. value must be lower than the max. value   |
| V'mid<br>x l/s   | Adjusts to desired intermediate value<br>Available in expert mode   |
| V'max<br>x l/s   | Adjusts to desired max. value<br>Max. value must be higher than the min. value  |
| V'nom<br>x l/s   | Shows the nominal air flow  |
| Δp@V'nom<br>120 Pa   | Pressure on which nominal air flow is based<br>Available in expert mode   |
| ALT.installation<br>0 m                                      | Number of metres above sea level<br>Available in advanced mode  |
| MP Address<br>>PP  | Setting of MP address   |
| PP<br>MP8<br>MP7<br>MP6<br>MP5<br>MP4<br>MP3<br>MP2<br>MP1   |   |



## Trouble shooting

### The product shows incorrect/no air flow

- Make sure that the product is energized.
- Check that the product's set size corresponds with the physical size.
- Make sure that the product is installed according to the recommended distance to disruptions, see "Installation".
- Check that there is an air flow.
- Make sure that the product is correctly oriented in terms of air direction. The air flow must follow the instructions on the product.
- Check that the measuring tube is mounted correctly, plus to plus (red), minus to minus (blue).
- Check that the measuring tubes are undamaged and not creased.
- Check with the help of the k-factor and pressure difference between the red and blue measuring tubes that the flow is within the product's measurement range.

### The product does not regulate the air flow

- Make sure that the product is energized.
- Check that the damper motor has not become detached from the damper spindle.
- Check that the damper motor works by pressing in the motor's release button, turn the damper spindle, release the release knob and then see whether the damper motor starts to move.
- Check that the product is connected correctly.
- Check that the product is not force controlled.

### The product does not regulate on the desired air flow

- Check that the settings for Vmin and Vmax correspond with the required regulation range.
- Check the electrical connection for the required function, see the wiring diagram in the document "REACT Belimo Description of functions & wiring diagrams".
- Check that the product is connected correctly, check the "Y" signal and polarity on "G" and "G0". See "Connections".

## Cleaning

Ideally, the product should be cleaned in connection with the cleaning of the rest of the ventilation system.

### Cleaning of electrical components

- If needed, use a dry cloth to clean the components.
- Never use water, detergent and cleaning solvent or a vacuum cleaner.

### External cleaning

- If necessary use tepid water and a well-wrung cloth.
- Never use detergent and cleaning solvent or a vacuum cleaner.

### Internal cleaning

- When cleaning the ventilation system, the product must be dismantled if there are no cleaning hatches close to the product.
- Cleaning equipment such as whisks and the like must not be fed through the product.
- If necessary remove dust and other particles that can be present in the product.
- Never use detergent and cleaning solvent or a vacuum cleaner.

## Service/maintenance

- The product does not require any maintenance, except for any cleaning when necessary.
- In connection with a service, mandatory ventilation inspection or cleaning of the ventilation system, check that the general condition of the product appears to be good. Pay particular attention to the suspension, cables and that they sit firmly in place.
- It is not permissible to open or repair electrical components.
- If you suspect that the product or a component is defective, please contact Swegon.
- A defective product or component must be replaced by an original spare part from Swegon.

## Materials and surface treatment

All sheet-metal parts are galvanized sheet steel (Z275).

## Disposal

Waste must be handled according to local regulations.

## Product warranty

The product warranty or service agreement will not be valid/will not be extended if: (1) the product is repaired, modified or changed, unless such repair, modification or change has been approved by Swegon AB; or (2) the serial number on the product has been made illegible or is missing.

## Performance checks

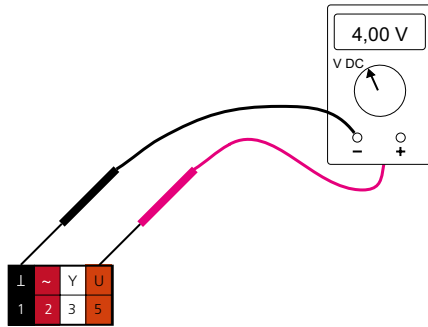


Figure 15. Shows connection of a voltmeter to check the actual value.

### Formulas for calculating air flow

The following applies for analogue control.

Control signal 0..10 V DC give the following formulas:

- Calculation of the current pressure ( $V_{act}$ ) when you know the value of the control signal (Y):

$$V_{act} = V_{min} + \frac{Y}{10 \text{ V DC}} \cdot (V_{max} - V_{min})$$

- Calculation of the current actual value (U) when you know the value of the current flow ( $V_{act}$ ):

$$U = 10 \text{ V DC} \cdot \frac{V_{act}}{V_{nom}}$$

Control signal 2..10 V DC gives the following formulas:

- Calculation of the current flow ( $V_{act}$ ) when you know the value of the the control signal (Y):

$$V_{act} = V_{min} + \frac{Y - 2 \text{ V DC}}{8 \text{ V DC}} \cdot (V_{max} - V_{min})$$

- Calculation of the current actual value (U) when you know the value of the current flow ( $V_{act}$ ):

$$U = 2 \text{ V DC} + 8 \text{ V DC} \cdot \frac{V_{act}}{V_{nom}}$$

Key to formulas opposite:

Y = control signal in [V] DC

U\* = actual value signal in [V] DC, always refers to 0- $V_{nom}$ .

$V_{act}$  = current air flow in [l/s, m<sup>3</sup>/h]

$V_{min}$  = set min. flow in [l/s, m<sup>3</sup>/h]

$V_{max}$  = set max. flow in [l/s, m<sup>3</sup>/h]

$V_{nom}$  = nominal flow in [l/s, m<sup>3</sup>/h], see tables on pages 2 and 4.

\*Note! Does not indicate damper position.

## Replacing the damper motor

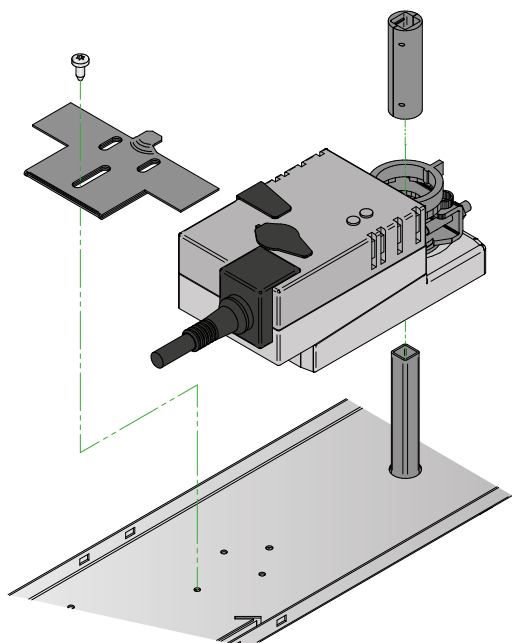


Figure 16. Dismantling the damper motor.

1. Disconnect the cable.
2. Disconnect the measuring tubes.
3. Set damper motor to the open position.
4. Loosen the nuts on the spindle clamp (nuts: 8mm).
5. Remove 1 screw for the locking strip on the circular design and 2 screws for the locking strip on the rectangular design (screw: TX20).
6. Lift off the damper motor and spindle adapter (The rectangular design has a round damper spindle and no spindle adapter).
7. Reassemble in the reverse order.

Note! Positioning of the damper blade and locking strip, see figures 17 and 18.

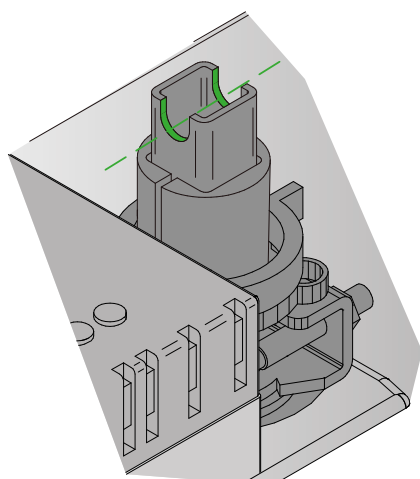


Figure 17. Recess in the damper spindle indicates the position of the damper.

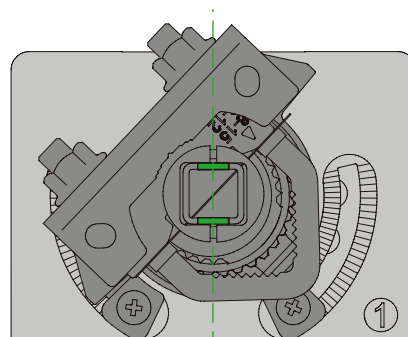


Figure 18. Damper open. Jumper to the left.

## Technical data

|   |   |
|---|---|
| IP class:                                   | IP54  |
| Corrosivity class:                          | C3  |
| Pressure class:                             | A   |
| Leakage classes according to SS-EN 1751     | C   |
| - Leakage class, casing:                    | 4   |
| - Leakage class circular damper, closed:    | 3   |
| - Leakage class rectangular damper, closed: |   |
| Running times open/close (90°):             |   |
| 5 Nm:                                       | 100 s   |
| 10 / 20 Nm:                                 | 150 s   |
| Ambient temperature                         |   |
| Operation:                                  | 0 – +50°C   |
| Storage:                                    | -20°C – +80°C   |
| RH:   | 5 – 95% (non-condensing)                                  |
| CE marking:                                 | 2006/42/EC (MD)<br>2014/30/EU (EMC)<br>2011/65/EU (RoHS2) |

## Electrical data

|   |                           |        |
|---|---------------------------|--------|
| Power supply:                                       | 24 V AC/DC ±15% 50 - 60Hz |        |
| Fixed connection cable,<br>1000 mm with cable size. | 4 x 0.75 mm²              |        |
| Power consumption, for transformer rating:          |                           |        |
| REACT V BMP 5 Nm                                    | 2.0 W                     | 3.5 VA |
| REACT V BMP 10 Nm                                   | 3.0 W                     | 5.0 VA |
| REACT V BMP 20 Nm                                   | 3.0 W                     | 5.5 VA |

## Declaration of Conformity

Swegon AB hereby affirms that:

REACT V BMPa complies with the essential characteristic demands and relevant regulations specified in the directives, 2006/42/EC (MD), 2014/30/EU (EMC) and 2011/65 EU (RoHS2):

The following standards have been observed:

|                   |   |
|-------------------|---|
| EN ISO 12100:2010 | Safety of machinery - General principles for design - Risk assessment and risk mitigation   |
| EN 60204-1:2006   | Safety of machinery - Electrical equipment of machines - Part 1: Generic standards  |
| EN 60730-1:2011   | Automatic electrical controls for household and similar use - Part 1 Generic standards  |
| EN 61000-6-2:2007 | Electromagnetic compatibility (EMC). Generic standards. Immunity for industrial environments  |
| EN 61000-6-3:2007 | Electromagnetic compatibility (EMC). Generic standards. Emission standard for residential, commercial and light-industrial environments |



Person responsible for this declaration:

Name: Freddie Hansson, R&D Manager Tomelilla

Address: Industrigatan 5, 273 21 Tomelilla, Sweden

Date: 230427

This declaration is applicable only if the product has been installed according to the instructions in this document and if no modifications or changes have been made on this product.

## References

[www.swegon.com](http://www.swegon.com)

Building Materials Declaration

REACT V BMP Product data sheet

REACT Belimo – Description of functions & wiring diagrams